




Quick Start Guide: How to Change the Software Language Settings

Purpose: After installing test.commander, ICP100, or test.viewer for the first time or performing a recent update, the language settings must be changed accordingly. Sometimes the software starts and defaults to German. This guide will describe how to switch the language of the software to English.


Procedure:

test.commander:

1. When test.commander opens, select Extras > Einstellungen:

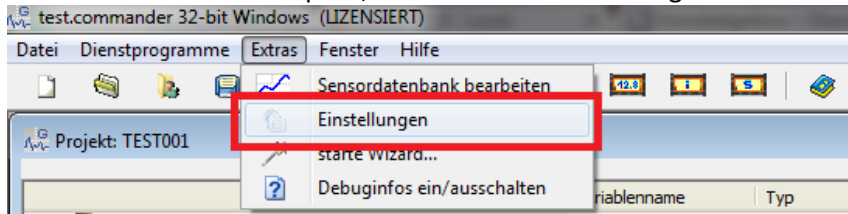

2. In the settings section, select Sprache:

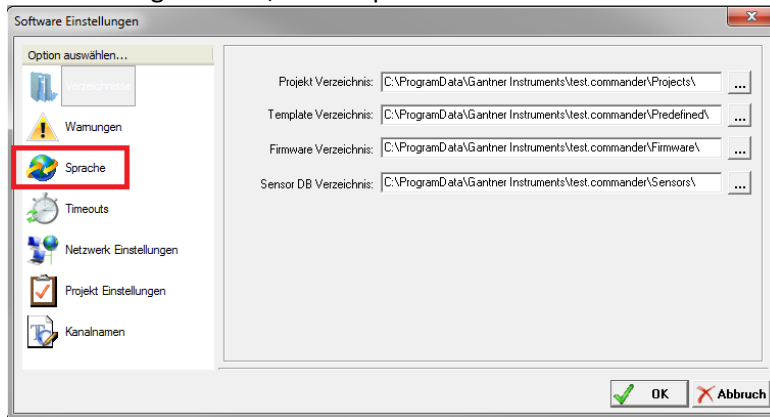

3. Select English:




4. Restart test.commander to apply the setting changes.



ICP100:

ICP100 is installed on the PC when test.commander is installed. If ICP100 is invoked via test.commander, it will apply the language settings used for test.commander. However, ICP100 can also be invoked without test.commander; and therefore its language setting can also be modified.

1. When ICP100 opens, click on Utilities > Einstellungen:

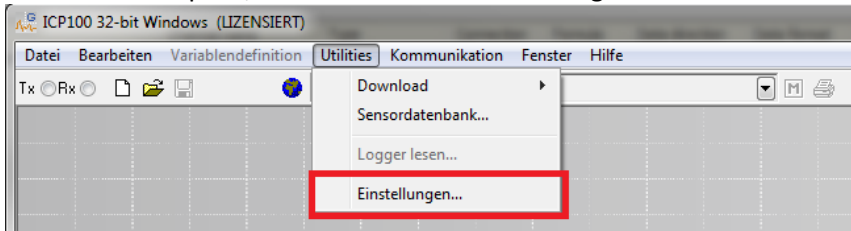

2. Under the Sprache option, select English:




3. Restart ICP100 to apply the setting changes.



test.viewer (i.e. GreenEye):

Similar to ICP100, test.viewer is also installed when test.commander is installed and can also be invoked without having to use test.commander.

1. If test.viewer opens in German, select Einstellungen > Sprache:

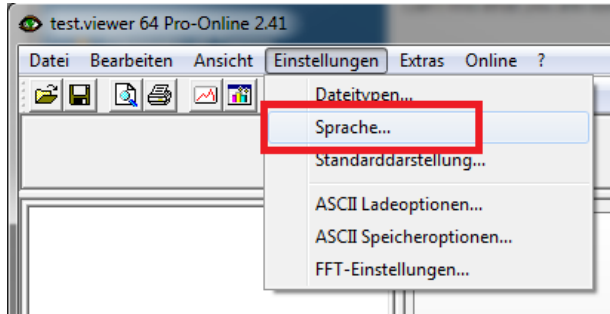

2. Select English and click OK. The language in test.viewer will change right away:

